

# Instrucciones



START








## Selection Programas:



1 x =  $A_0$  valor 1

2 x =  $A_0$  valor 2

3 x =  $A_0$  valor 3

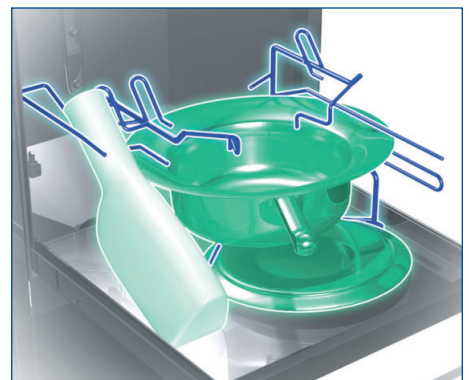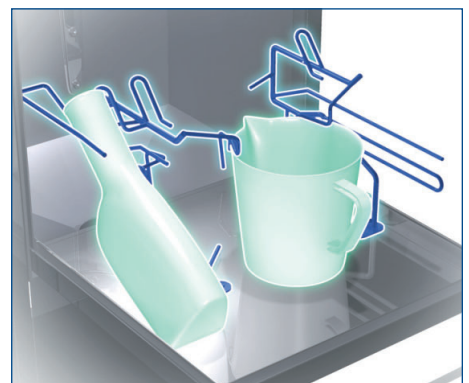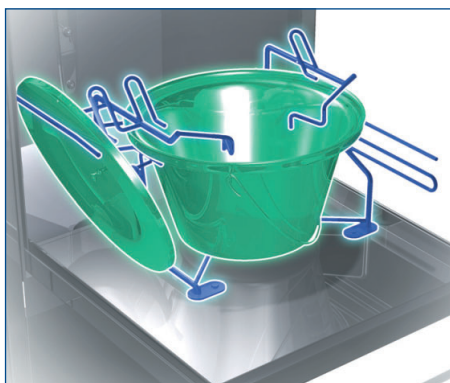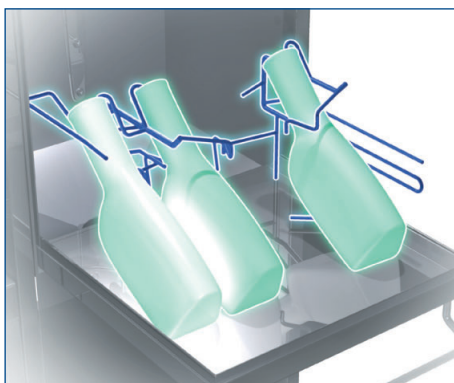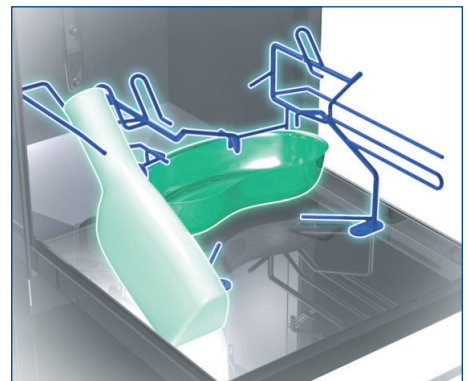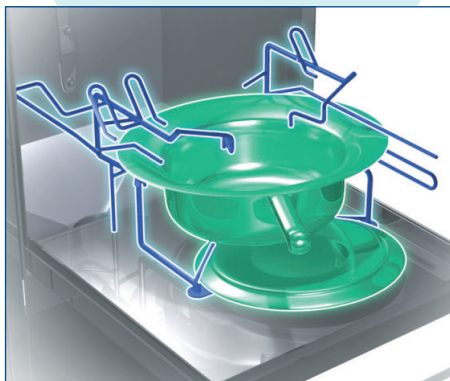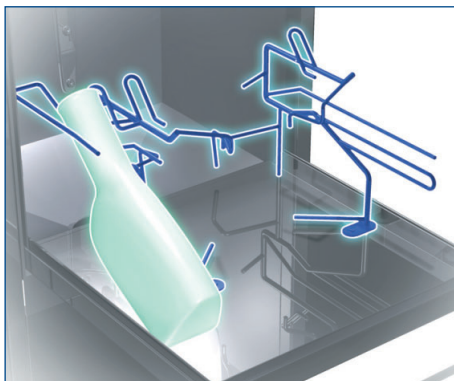

 **DISCHER Technik GmbH**  
Fuhr 4-6 • D- 42781 Haan  
Tel: +49 (0) 2104 2336 0  
Fax: +49 (0) 2104 2336 99  
info@discher.de  
www.discher.de

