

Brevi istruzioni per l'uso DISCHER®










START



1 x = A₀ "Valore 1"

2 x = A₀ "Valore 2"

3 x = A₀ "Valore 3"

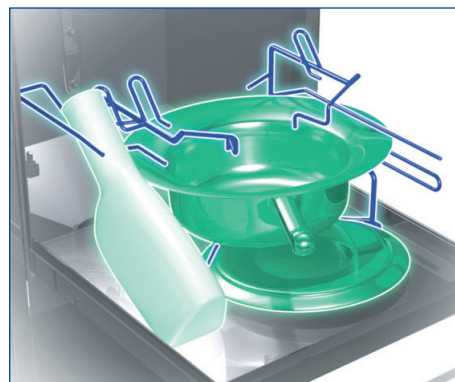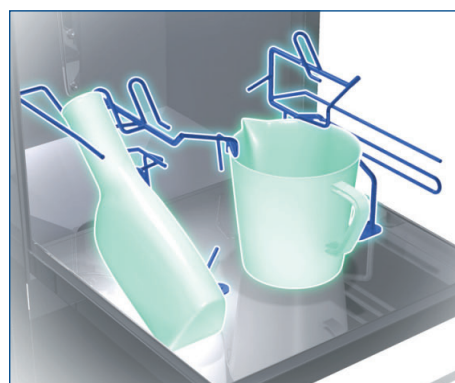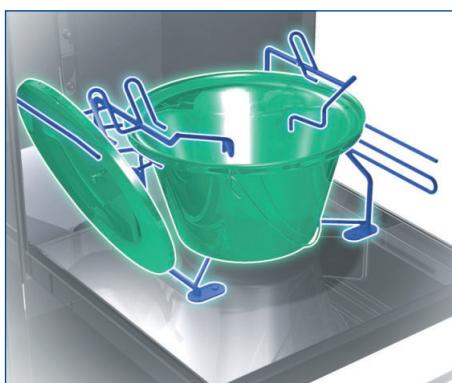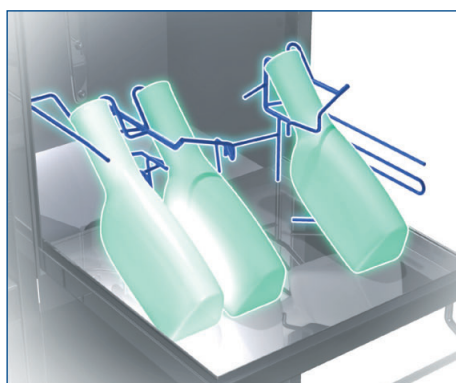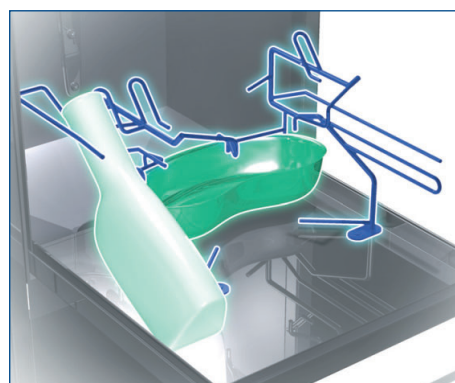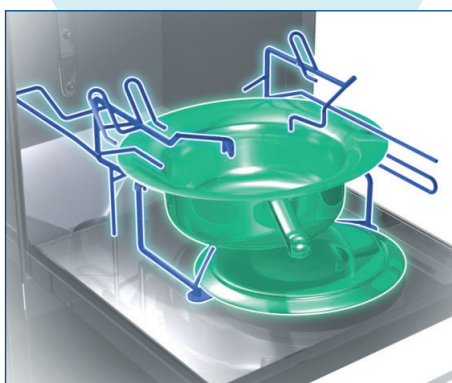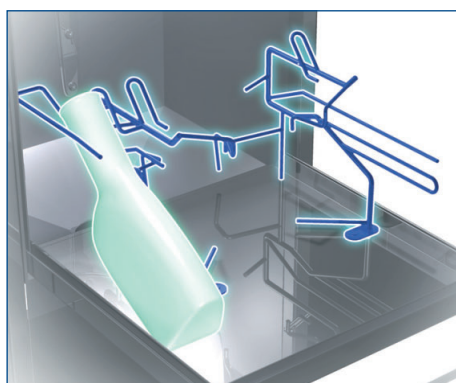

 **DISCHER Technik GmbH**
Fuhr 4-6 • D- 42781 Haan
Tel: +49 (0) 2104 2336 0
Fax: +49 (0) 2104 2336 99
info@discher.de
www.discher.de

